


NON-FLUSH STACK  
(EQUAL GLASS)


**NARROW STILE 3008**

**OIXO SHOWN**

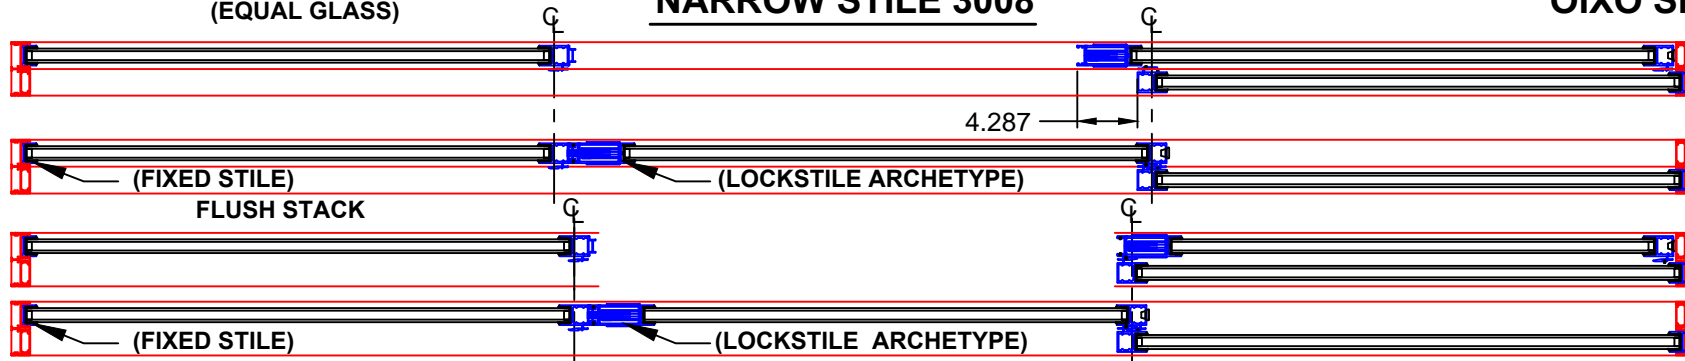


NON-FLUSH STACK  
(EQUAL GLASS)

**ARCHETYPE NARROW 3005**

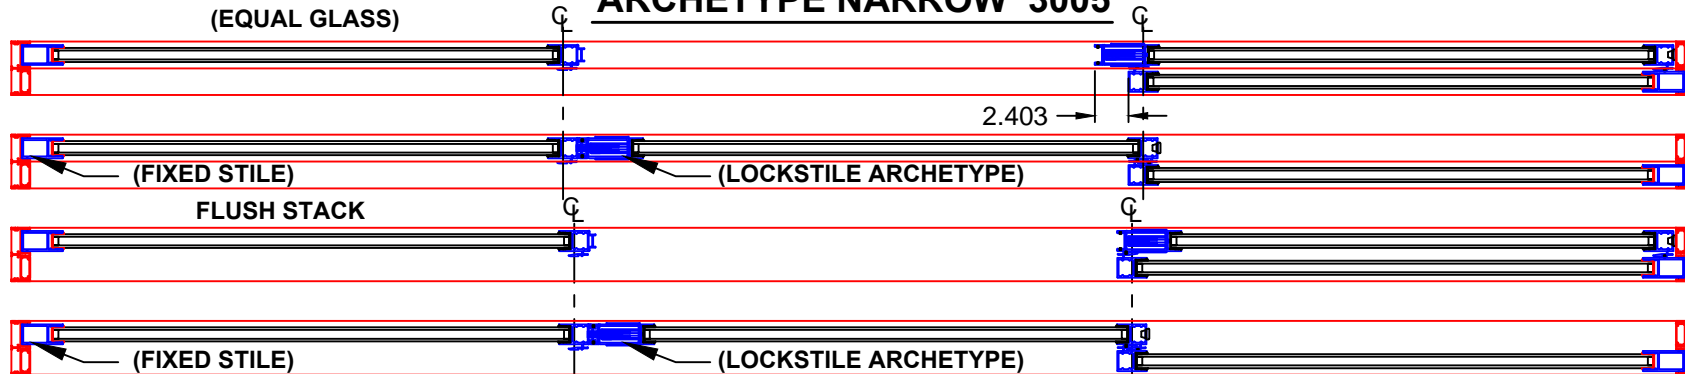

NON-FLUSH STACK  
(EQUAL GLASS)

**ARCHETYPE STILE 3767**

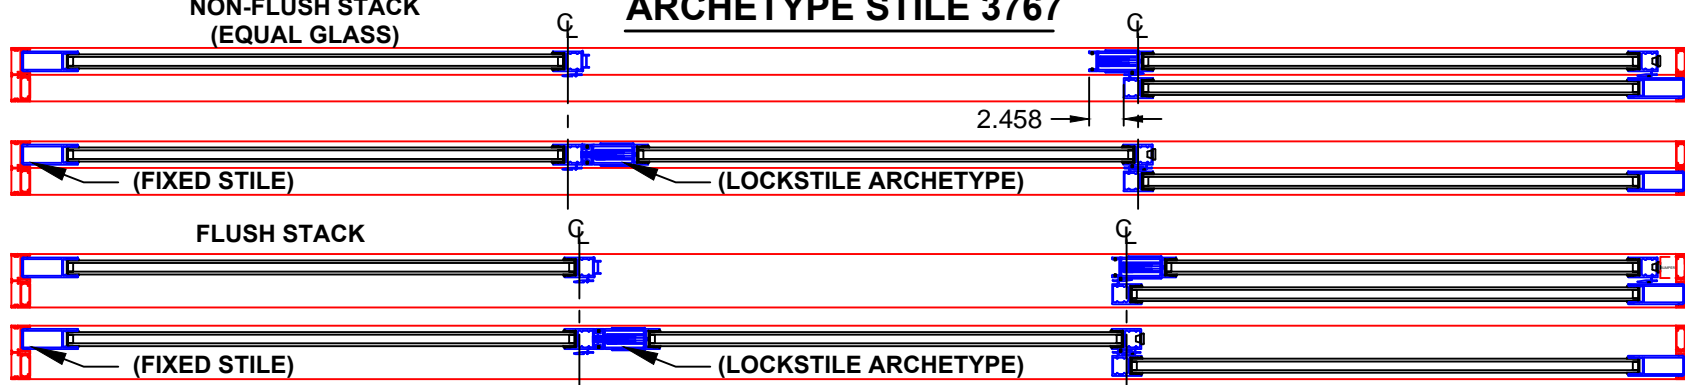

- NARROW STILE 3008**
1. CALCULATE EQUAL GLASS SIZES.
  2. DIVIDE 4.287 BY 3 FOR ADD AMOUNT OF 1.429.
  3. ADD 1.429 TO BOTH O PANELS GLASS.
  4. MULTIPLY 1.429 BY 2 FOR ADD AMOUNT OF 2.858.
  5. SUBTRACT 2.858 FROM X PANEL GLASS.

- ARCHETYPE NARROW STILE 3005**
1. CALCULATE EQUAL GLASS SIZES.
  2. DIVIDE 2.403 BY 3 FOR ADD AMOUNT OF 0.801.
  3. ADD 0.801 TO BOTH O PANELS GLASS.
  4. MULTIPLY 0.801 BY 2 FOR ADD AMOUNT OF 1.602.
  5. SUBTRACT 1.602 FROM X PANEL GLASS.

- ARCHETYPE STILE 3767**
1. CALCULATE EQUAL GLASS SIZES.
  2. DIVIDE 2.458 BY 3 FOR ADD AMOUNT OF 0.819.
  3. ADD 0.819 TO BOTH O PANELS GLASS.
  4. MULTIPLY 0.819 BY 2 FOR ADD AMOUNT OF 1.638.
  5. SUBTRACT 1.638 FROM X PANEL GLASS.