


NON-FLUSH STACK
(EQUAL GLASS)


NARROW STILE 3008

OIXO SHOWN

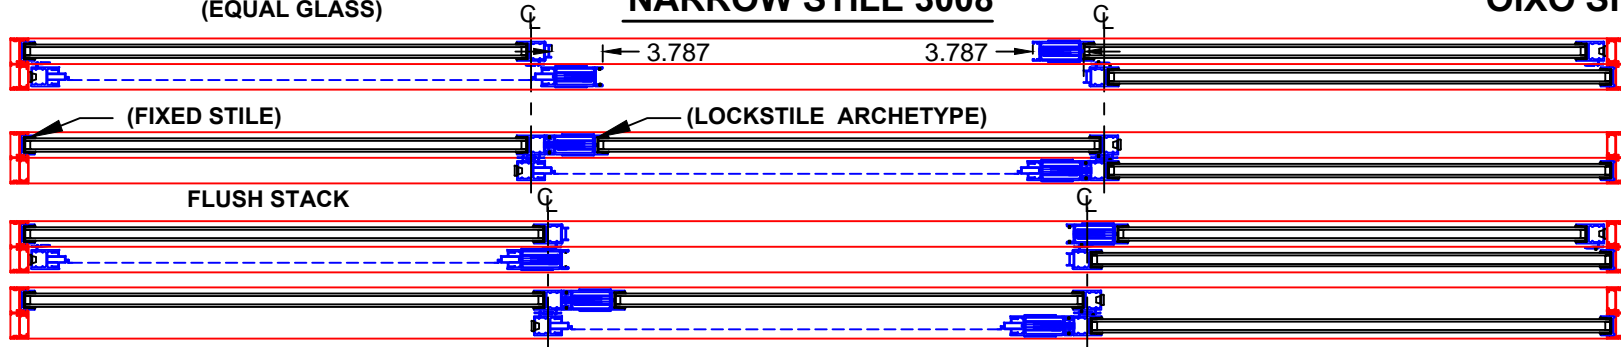


NON-FLUSH STACK
(EQUAL GLASS)

ARCHETYPE NARROW 3005

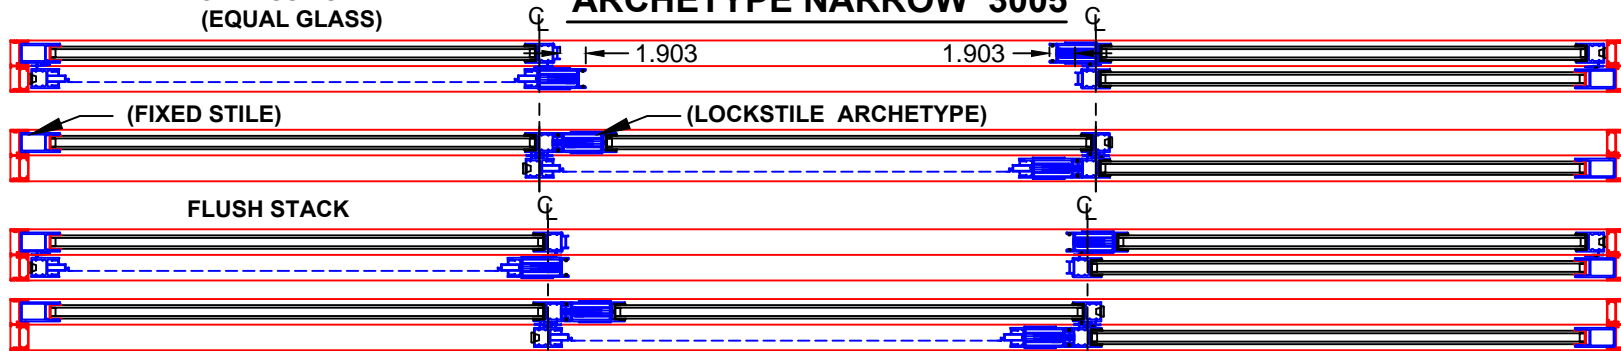

NON-FLUSH STACK
(EQUAL GLASS)

ARCHETYPE STILE 3767

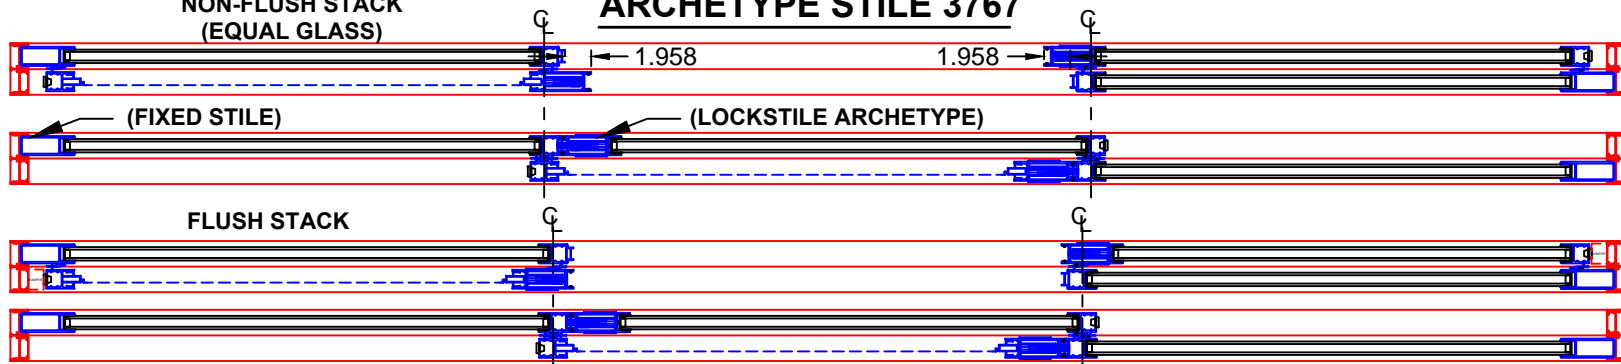

NARROW STILE 3008

1. CALCULATE EQUAL GLASS SIZES.
2. DIVIDE 3.787 BY 3 FOR ADD AMOUNT OF 1.262.
3. ADD 1.262 TO BOTH O PANELS GLASS.
4. MULTIPLY 1.262 BY 2 FOR ADD AMOUNT OF 2.524.
5. SUBTRACT 2.524 FROM X PANEL GLASS AND SCREEN.

ARCHETYPE NARROW STILE 3005

1. CALCULATE EQUAL GLASS SIZES.
2. DIVIDE 1.903 BY 3 FOR ADD AMOUNT OF 0.634.
3. ADD 0.634 TO BOTH O PANELS GLASS.
4. MULTIPLY 0.634 BY 2 FOR ADD AMOUNT OF 1.268.
5. SUBTRACT 1.268 FROM X PANEL GLASS AND SCREEN.

ARCHETYPE STILE 3767

1. CALCULATE EQUAL GLASS SIZES.
2. DIVIDE 1.958 BY 3 FOR ADD AMOUNT OF 0.652.
3. ADD 0.652 TO BOTH O PANELS GLASS.
4. MULTIPLY 0.652 BY 2 FOR ADD AMOUNT OF 1.304.
5. SUBTRACT 1.304 FROM X PANEL GLASS AND SCREEN.