



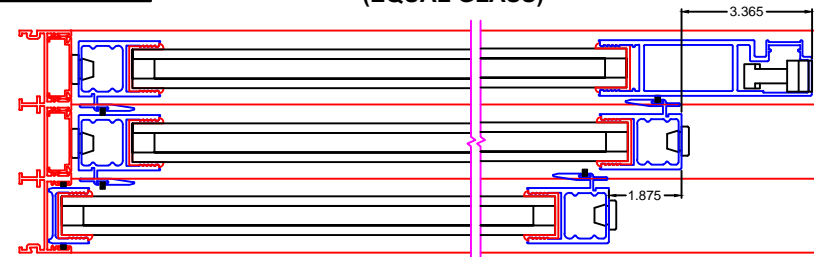

FLUSH STACK

NARROW STILE 3008



NON-FLUSH STACK
(EQUAL GLASS)

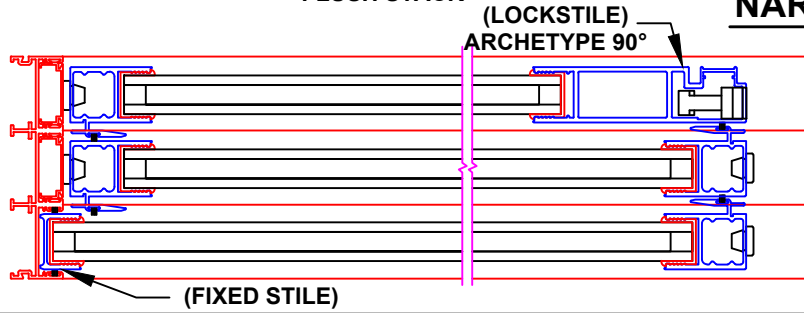

FLUSH STACK

ARCHETYPE NARROW 3005



NON-FLUSH STACK
(EQUAL GLASS)

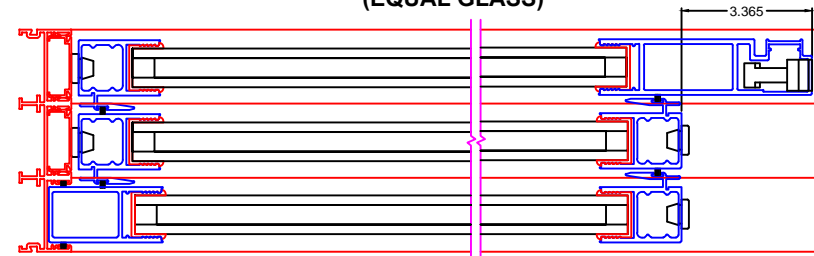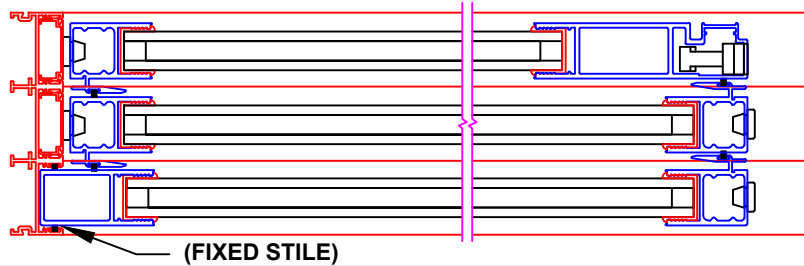

FLUSH STACK

ARCHETYPE STILE 3767

NON-FLUSH STACK
(EQUAL GLASS)

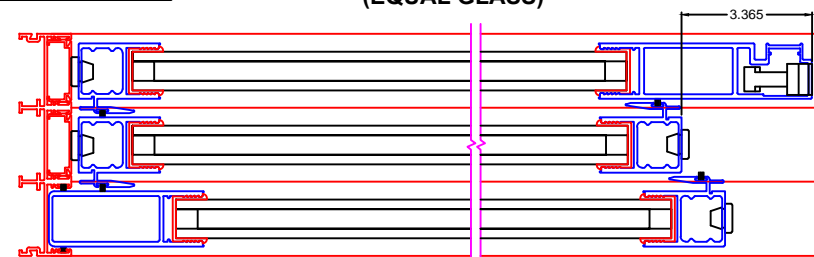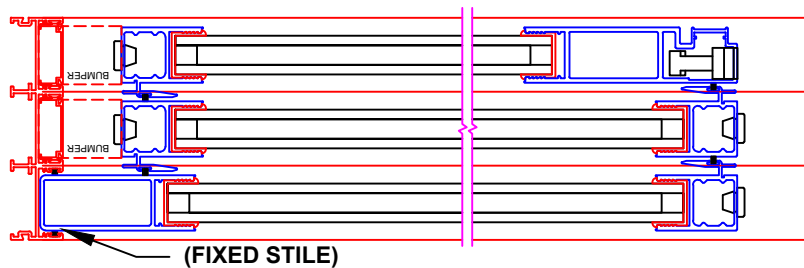

NARROW STILE 3008

1. CALCULATE EQUAL GLASS SIZES.
2. SUBTRACT 3.365 FROM LEAD GLASS
3. ADD 1.875 TO FIXED GLASS.
4. SUBTRACT 1.875 FROM 3.365 FOR ADD OF 1.49
5. DIVIDE THE TOTAL ADD OF 1.49 BY TOTAL# PANELS, ADD THAT AMOUNT TO ALL GLASS PANELS .

ARCHETYPE NARROW 3005

1. CALCULATE EQUAL GLASS SIZES.
2. SUBTRACT 3.365 FROM LEAD GLASS
3. DIVIDE THE TOTAL ADD OF 3.365 BY TOTAL# PANELS, ADD THAT AMOUNT TO ALL GLASS PANELS .

ARCHETYPE STILE 3767

1. CALCULATE EQUAL GLASS SIZES.
2. SUBTRACT 3.365 FROM LEAD GLASS
3. DIVIDE THE TOTAL ADD OF 3.365 BY TOTAL# PANELS, ADD THAT AMOUNT TO ALL GLASS PANELS .